OMNI RANGE

Product image set — five models, eight views




OMNI 2	OMNI 5	OMNI 10	OMNI 20	OMNI 30
2,000 litres	5,000 litres	10,000 litres	20,000 litres	30,000 litres
Ø 1.2 m	Ø 1.8 m	Ø 2.6 m	Ø 3.6 m	Ø 4.5 m

OMNI 20 — IN SERVICE

OMNI 20

20,000 litres of stored water, installed by two people in a day, with a 20+ year service life.


CAPACITY	20,000 litres · 5,280 gal
INSTALL	Two people, one day
SERVICE LIFE	20+ years

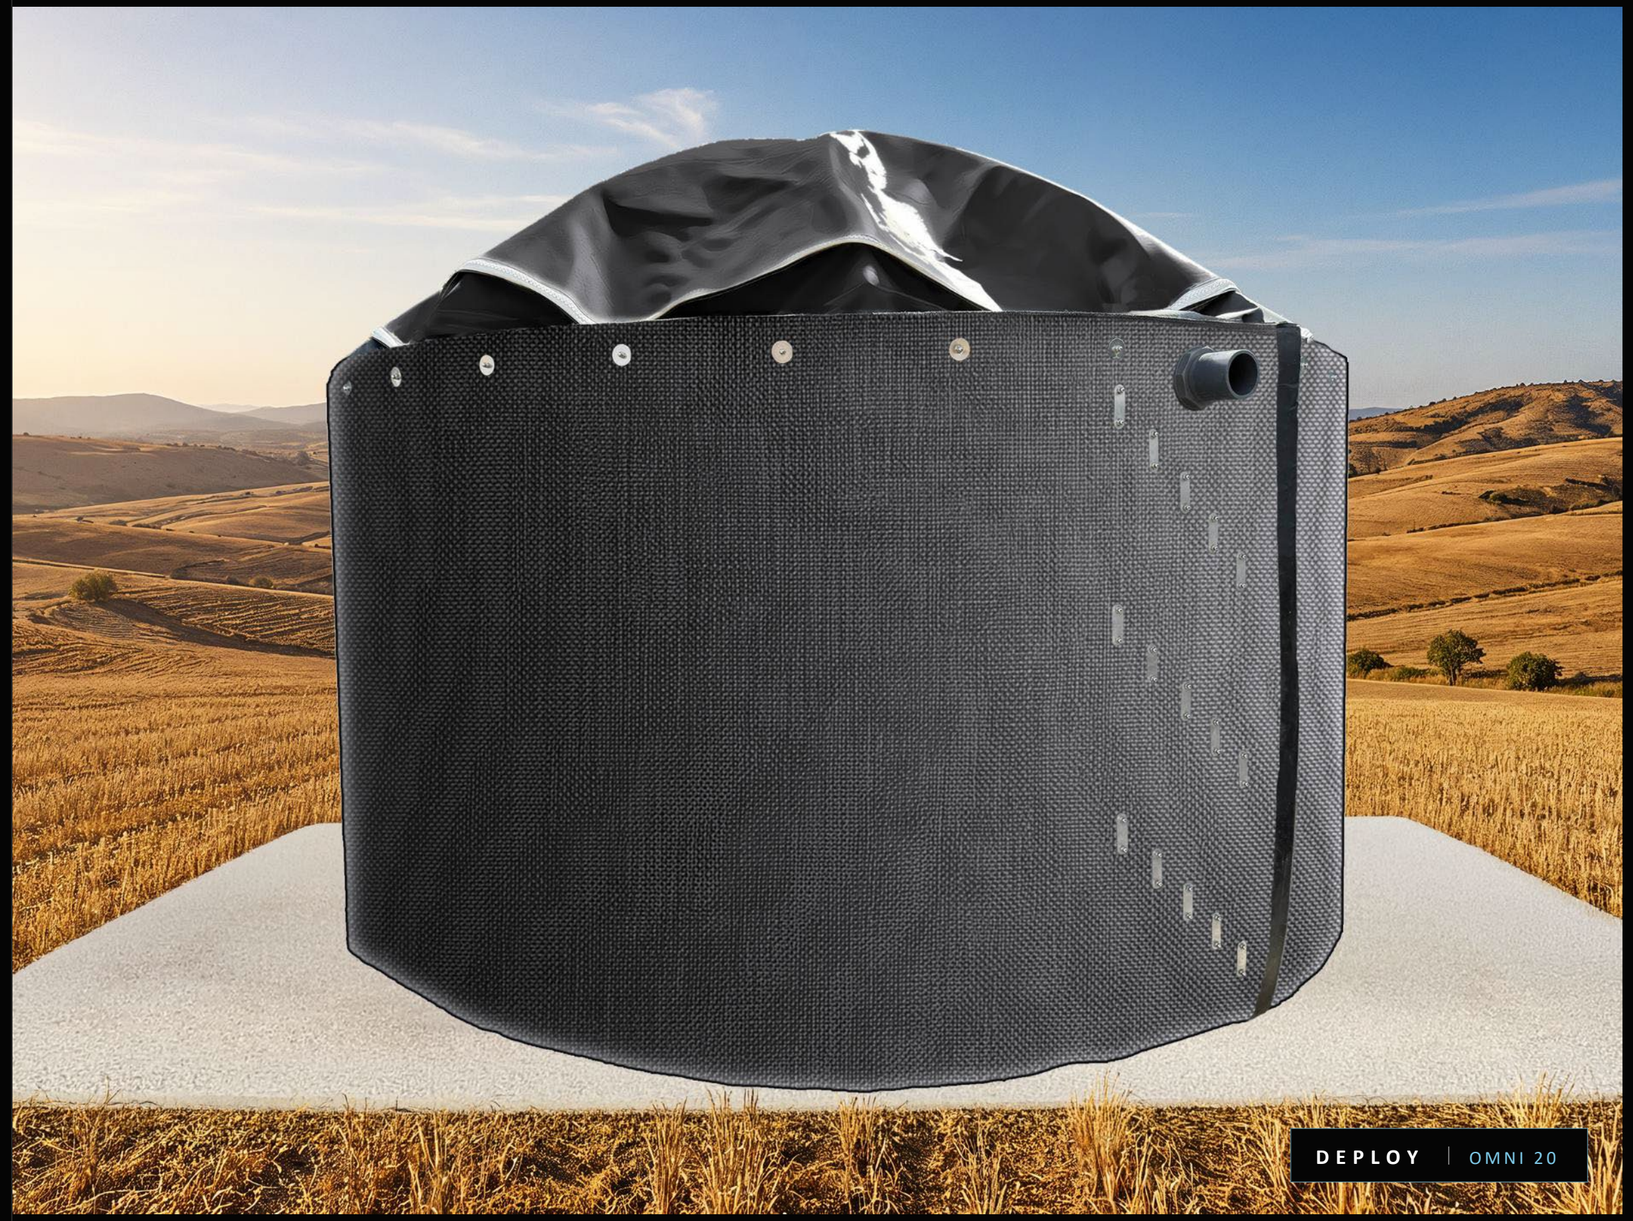

Standard fittings, front and rear

All fittings are supplied fitted. The overflow doubles as the rainwater inlet. The rear view shows the inlet.

OVERFLOW	OUTLET	INLET
110 mm (4 in), upper wall — also the rainwater inlet	50 mm (2 in), base	50 mm (2 in), upper wall, rear

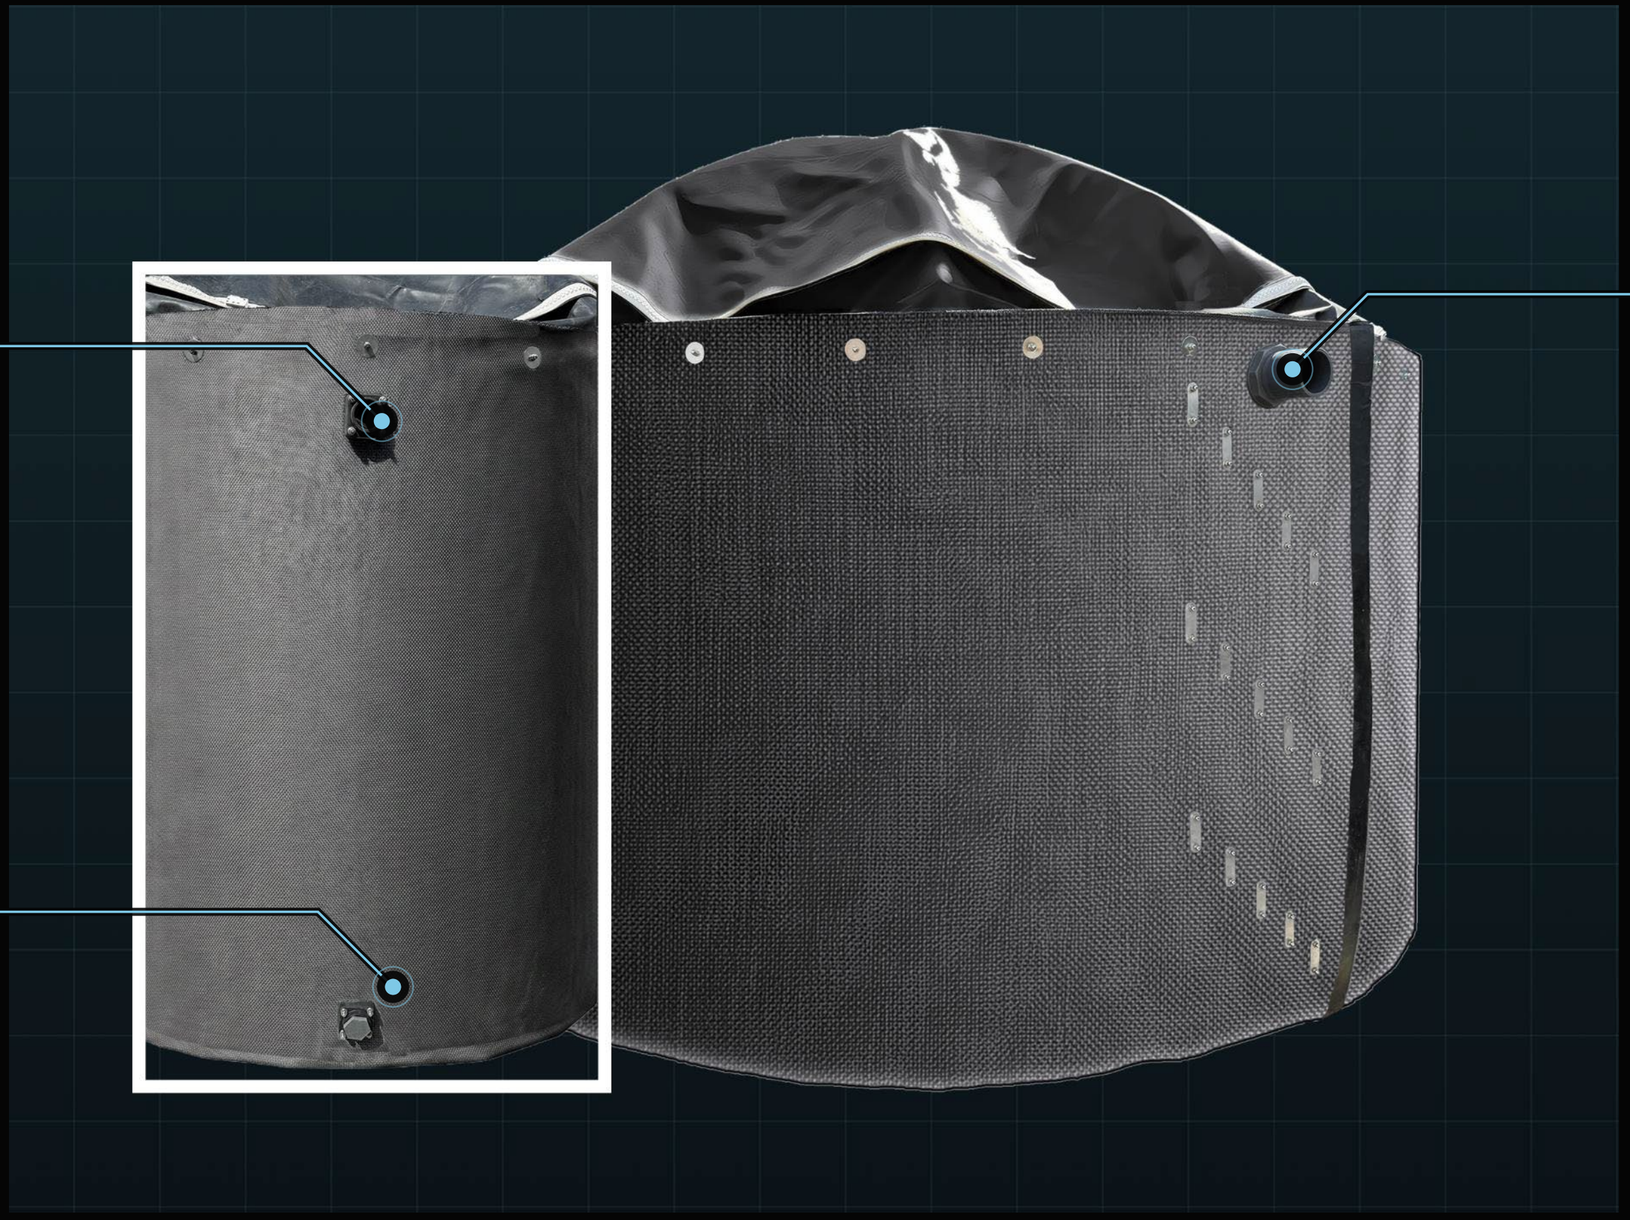

02
Inlet
50 mm (2 in), upper wall, rear view

03
Outlet
50 mm (2 in) at the base

01
Overflow / Rainwater inlet
110 mm (4 in), upper wall — rainwater enters here

OMNI 20 — CRATED

Arrives flat-packed

Forklift-ready plywood crate, dimensions marked on the crate itself.



GROSS WEIGHT	545 kg

OMNI 20 — PACKED

Position before you unpack

Lay the roll with the 110 mm overflow facing up, lid end right, base end left. Packed dimensions are marked on the roll.

NOTE Small tanks and large tanks start from different positions on the slab. Follow the positioning diagram in your model's installation guide to get a perfect starting point.



OMNI 20 — INFLATED

Inflated and standing

The blower brings the tank to full form and runs throughout. Help the packaging folds open outward when growth stalls, then approximately 5 to 10 minutes to full volume. The blower is connected to the 110 mm overflow / rainwater inlet.

BLOWER CONNECTION	110 mm overflow / inlet
TIME TO FULL FORM	5 to 10 minutes



OMNI 20 — HYDRATION

Hydrate the whole surface

Wet the entire wall with a spray nozzle until the surface is completely wet through. This model needs a minimum of 350 litres (92 US gal). Hydrate at dusk and rehydrate 3 to 4 times within the first 5 hours. Below 5°C (41°F) use warm water and cover with plastic sheeting.

> **NOTE** You cannot over-hydrate the tank — the more water you spray, the better it performs. Never use a high-pressure system, which disperses cement from the fabric and weakens the wall.

MINIMUM WATER	350 litres · 92 US gal
REHYDRATE	3 to 4 times in the first 5 hours



OMNI 20 — OPEN LID

10 poles, 200.8 cm spokes

The lid detaches completely for inspection and maintenance. The roof frame runs 10 spokes from a single central hub to the wall poles, each spoke 200.8 cm from hub to elbow, supplied in 3 segments.

POLES	10
SPOKE RUN	200.8 cm · 6.6 ft
SUPPLIED IN	3 segments



OMNI 20 — SCALE

20,000 litres

Ø 3.6 m (11.8 ft) across

Every model stands 2.0 m (6.6 ft) to the top of the wall, and 2.8 m to the top of the lid. Only the diameter changes across the range. The figure alongside is 1.8 m (5.9 ft) tall.



CAPACITY	20,000 litres · 5,280 gal
HEIGHT TO LID	2.8 m