OMNI RANGE

Product image set — five models, eight views



OMNI 2	OMNI 5	OMNI 10	OMNI 20	OMNI 30
2,000 litres	5,000 litres	10,000 litres	20,000 litres	30,000 litres
Ø 1.2 m	Ø 1.8 m	Ø 2.6 m	Ø 3.6 m	Ø 4.5 m

OMNI 30 — IN SERVICE

OMNI 30

30,000 litres of stored water, installed by two people in a day, with a 20+ year service life.

CAPACITY	30,000 litres · 7,920 gal
INSTALL	Two people, one day
SERVICE LIFE	20+ years




Standard fittings, front and rear

All fittings are supplied fitted. The overflow doubles as the rainwater inlet. The rear view shows the inlet.

OVERFLOW	OUTLET	INLET
110 mm (4 in), upper wall — also the rainwater inlet	50 mm (2 in), base	50 mm (2 in), upper wall, rear

01
Overflow / Rainwater inlet

110 mm (4 in), upper wall — rainwater enters here

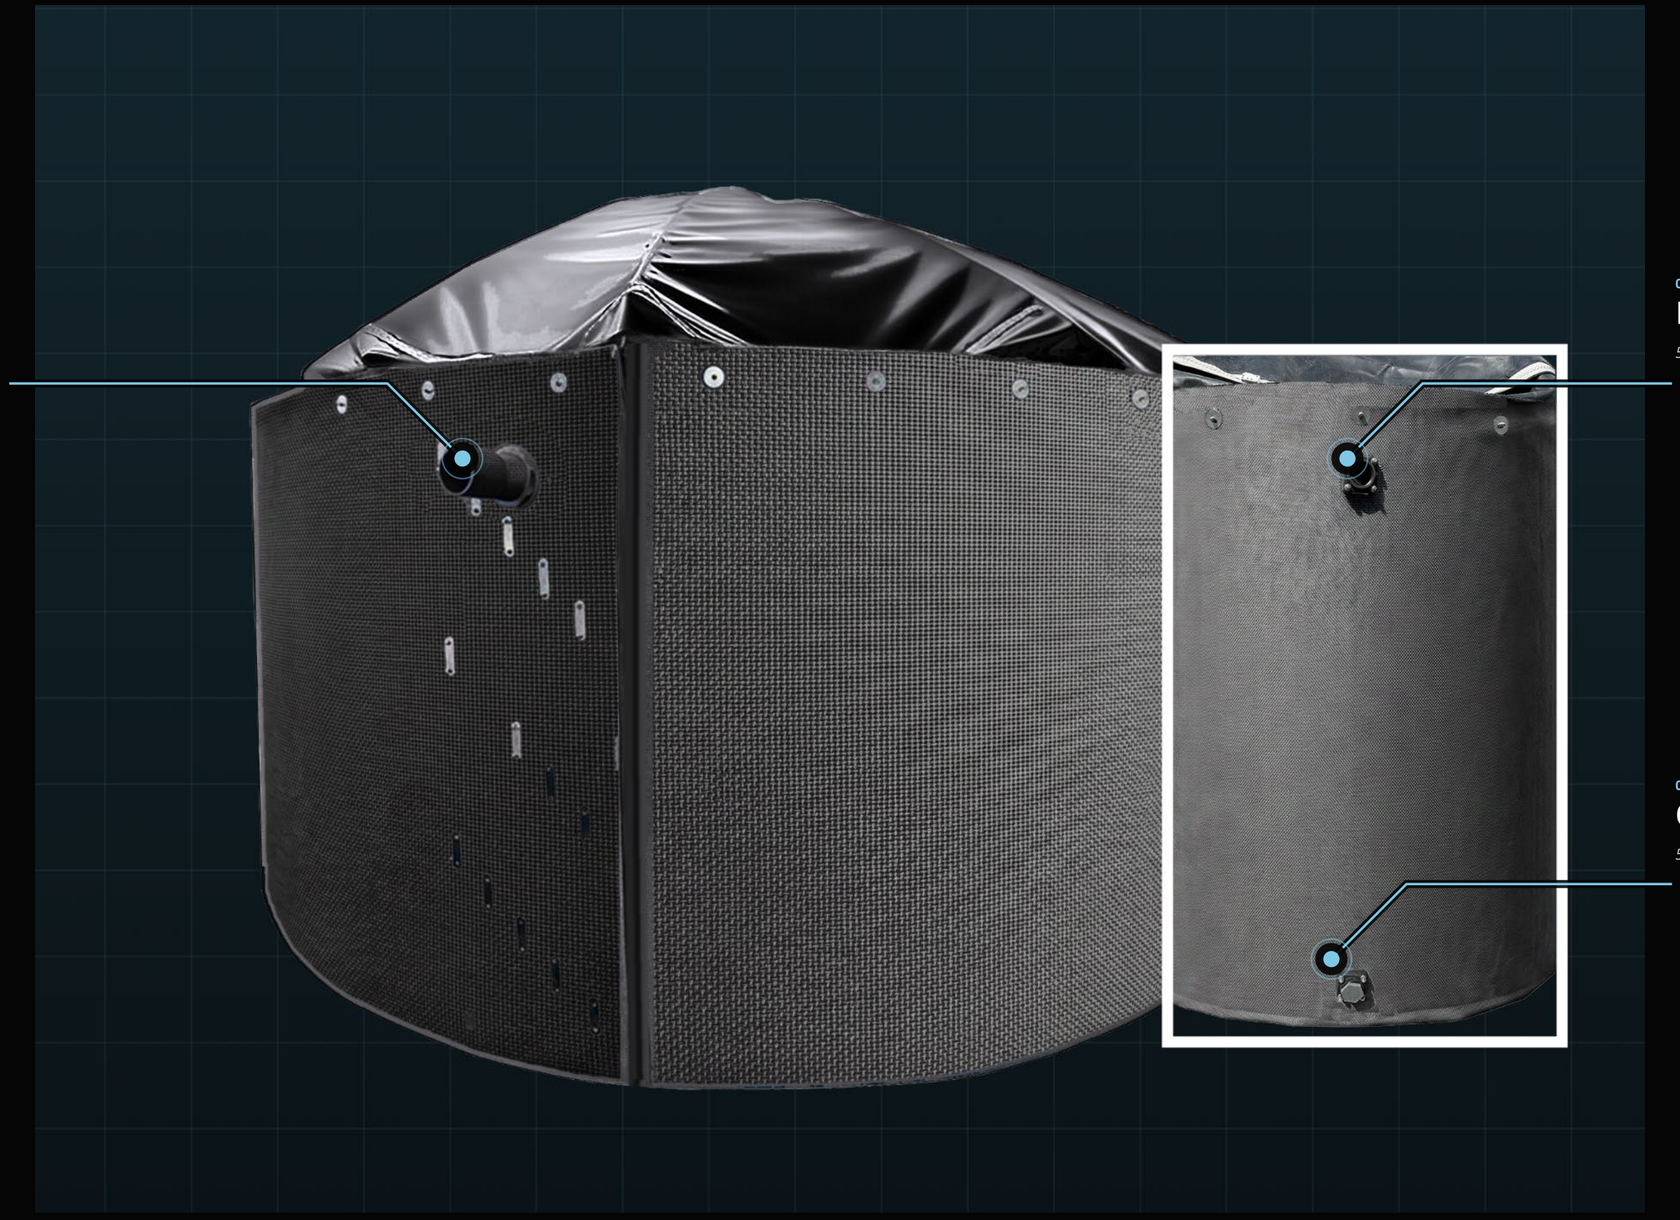

02
Inlet

50 mm (2 in), upper wall, rear view

03
Outlet

50 mm (2 in) at the base

OMNI 30 — CRATED

Arrives flat-packed

Forklift-ready plywood crate, dimensions marked on the crate itself.



GROSS WEIGHT	645 kg

OMNI 30 — PACKED

Position before you unpack

Lay the roll with the 110 mm overflow facing up, lid end right, base end left. Packed dimensions are marked on the roll.

NOTE Small tanks and large tanks start from different positions on the slab. Follow the positioning diagram in your model's installation guide to get a perfect starting point.



Inflated and standing

The blower brings the tank to full form and runs throughout. Help the packaging folds open outward when growth stalls, then approximately 5 to 10 minutes to full volume. The blower is connected to the 110 mm overflow / rainwater inlet.

BLOWER CONNECTION	110 mm overflow / inlet
TIME TO FULL FORM	5 to 10 minutes



Hydrate the whole surface

Wet the entire wall with a spray nozzle until the surface is completely wet through. This model needs a minimum of 400 litres (106 US gal). Hydrate at dusk and rehydrate 3 to 4 times within the first 5 hours. Below 5°C (41°F) use warm water and cover with plastic sheeting.

NOTE You cannot over-hydrate the tank — the more water you spray, the better it performs. Never use a high-pressure system, which disperses cement from the fabric and weakens the wall.

MINIMUM WATER	400 litres · 106 US gal
REHYDRATE	3 to 4 times in the first 5 hours



OMNI 30 — OPEN LID

12 poles, 242.5 cm spokes

The lid detaches completely for inspection and maintenance. The roof frame runs 12 spokes from a single central hub to the wall poles, each spoke 242.5 cm from hub to elbow, supplied in 3 segments.

POLES	12
SPOKE RUN	242.5 cm · 8.0 ft
SUPPLIED IN	3 segments



OMNI 30 — SCALE

30,000 litres

Ø 4.5 m (14.8 ft) across

Every model stands 2.0 m (6.6 ft) to the top of the wall, and 3.0 m to the top of the lid. Only the diameter changes across the range. The figure alongside is 1.8 m (5.9 ft) tall.



CAPACITY	30,000 litres · 7,920 gal
HEIGHT TO LID	3.0 m