OMNI RANGE

Product image set — five models, eight views



OMNI 2	OMNI 5	OMNI 10	OMNI 20	OMNI 30
2,000 litres	5,000 litres	10,000 litres	20,000 litres	30,000 litres
Ø 1.2 m	Ø 1.8 m	Ø 2.6 m	Ø 3.6 m	Ø 4.5 m

OMNI 5 — IN SERVICE

OMNI 5

5,000 litres of stored water, installed by two people in a day, with a 20+ year service life.

CAPACITY	5,000 litres · 1,320 gal
INSTALL	Two people, one day
SERVICE LIFE	20+ years



Standard fittings, front and rear

All fittings are supplied fitted. The overflow doubles as the rainwater inlet. This model has no secondary inlet.

OVERFLOW
110 mm (4 in), upper wall — also the rainwater inlet

OUTLET
50 mm (2 in), base

INLET
No secondary inlet — water enters through the overflow

01
Overflow / Rainwater inlet

110 mm (4 in), upper wall — rainwater enters here



02
Outlet

50 mm (2 in) at the base — rear view

OMNI 5 — CRATED

Arrives flat-packed

External crate dimensions are marked on the crate itself. This model also ships in a multi-crate holding four units.




GROSS WEIGHT	268 kg
MULTI-CRATE (×4)	234 × 125 × 135 cm
IN FEET	7.7 × 4.1 × 4.4 ft
MULTI-CRATE GROSS	935 kg

OMNI 5 — PACKED

Position before you unpack

Lay the roll with the 110 mm overflow facing up, lid end right, base end left. Packed dimensions are marked on the roll.

> **NOTE** Small tanks and large tanks start from different positions on the slab. Follow the positioning diagram in your model's installation guide to get a perfect starting point.

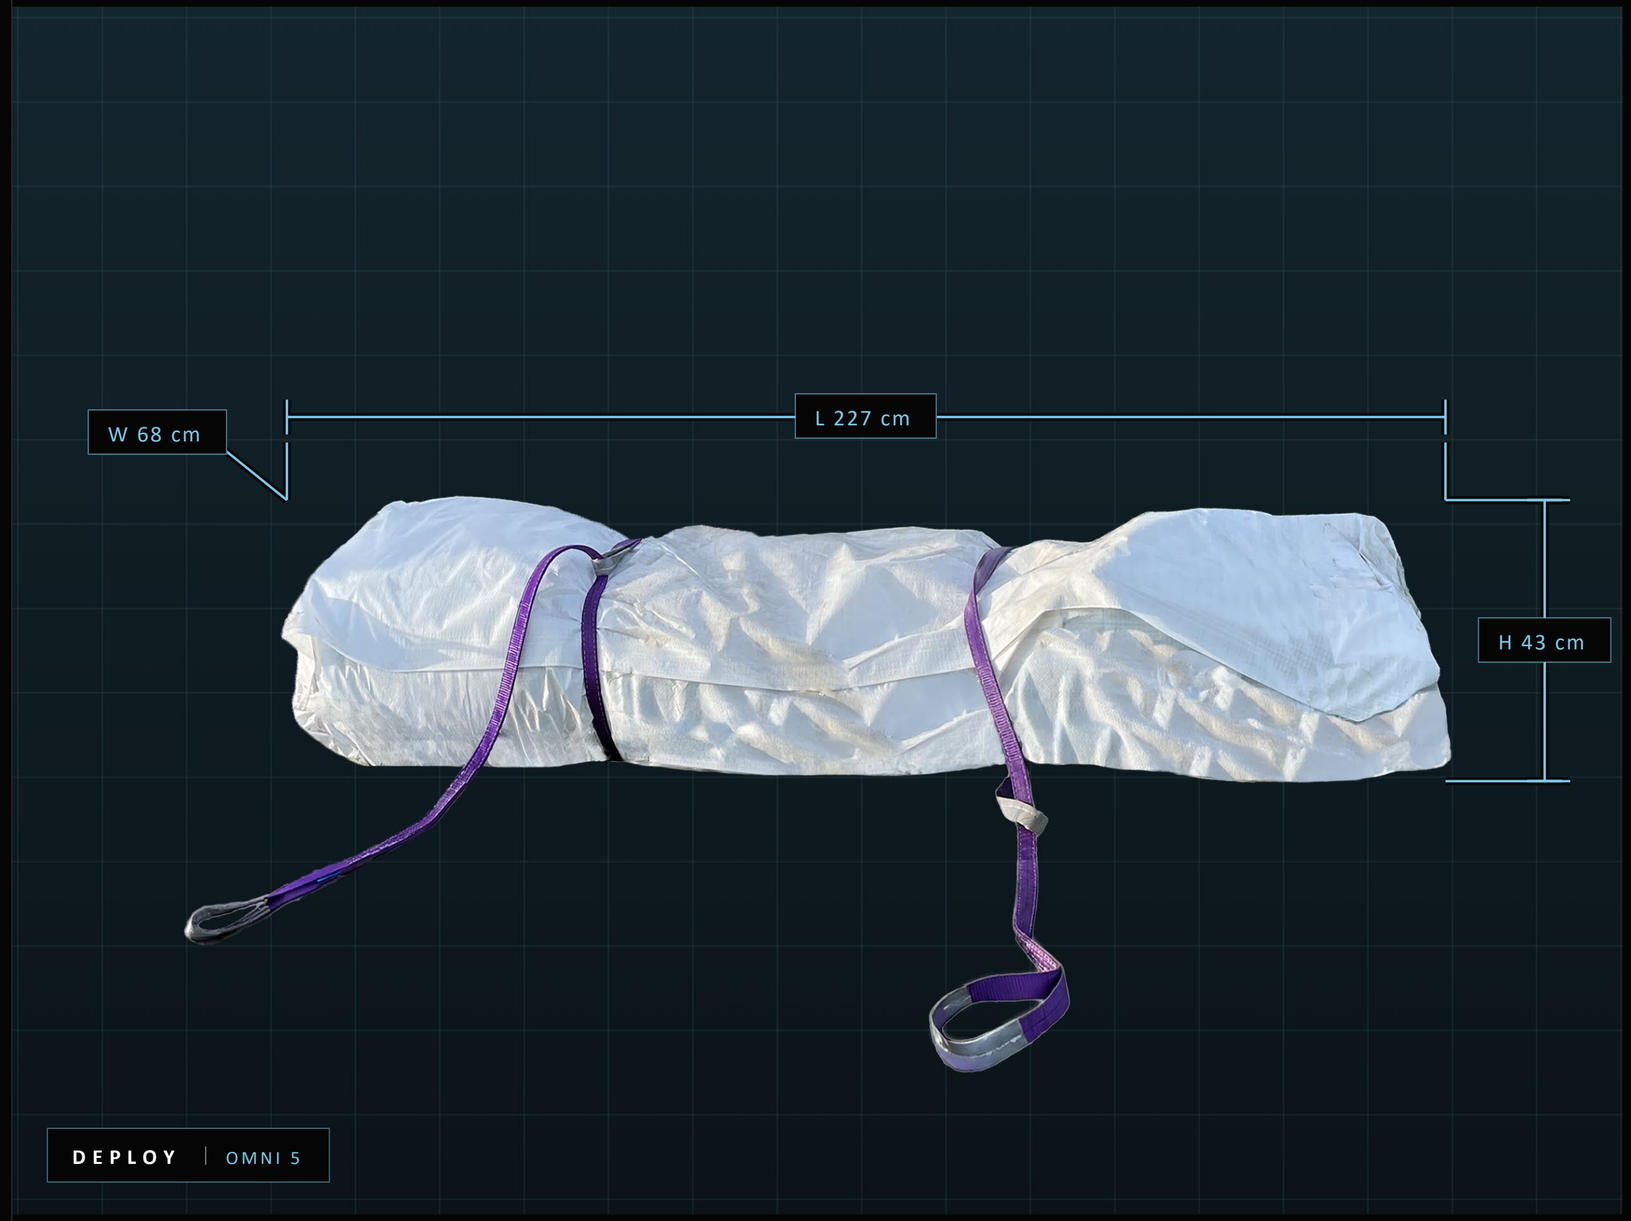

OMNI 5 — INFLATED

Inflated and standing

The blower brings the tank to full form and runs throughout. Help the packaging folds open outward when growth stalls, then approximately 5 to 10 minutes to full volume. The blower is connected to the 110 mm overflow / rainwater inlet.

BLOWER CONNECTION	110 mm overflow / inlet
TIME TO FULL FORM	5 to 10 minutes



OMNI 5 — HYDRATION

Hydrate the whole surface

Wet the entire wall with a spray nozzle until the surface is completely wet through. This model needs a minimum of 200 litres (53 US gal). Hydrate at dusk and rehydrate 3 to 4 times within the first 5 hours. Below 5°C (41°F) use warm water and cover with plastic sheeting.

> **NOTE** You cannot over-hydrate the tank — the more water you spray, the better it performs. Never use a high-pressure system, which disperses cement from the fabric and weakens the wall.

MINIMUM WATER	200 litres · 53 US gal
REHYDRATE	3 to 4 times in the first 5 hours



OMNI 5 — OPEN LID

5 poles, 97.9 cm spokes

The lid detaches completely for inspection and maintenance. The roof frame runs 5 spokes from a single central hub to the wall poles, each spoke 97.9 cm from hub to elbow, supplied in 1 segment.

POLES	5
SPOKE RUN	97.9 cm · 3.2 ft
SUPPLIED IN	1 segment




OMNI 5 — SCALE

5,000 litres

Ø 1.8 m (5.9 ft) across

Every model stands 2.0 m (6.6 ft) to the top of the wall, and 2.4 m to the top of the lid. Only the diameter changes across the range. The figure alongside is 1.8 m (5.9 ft) tall.

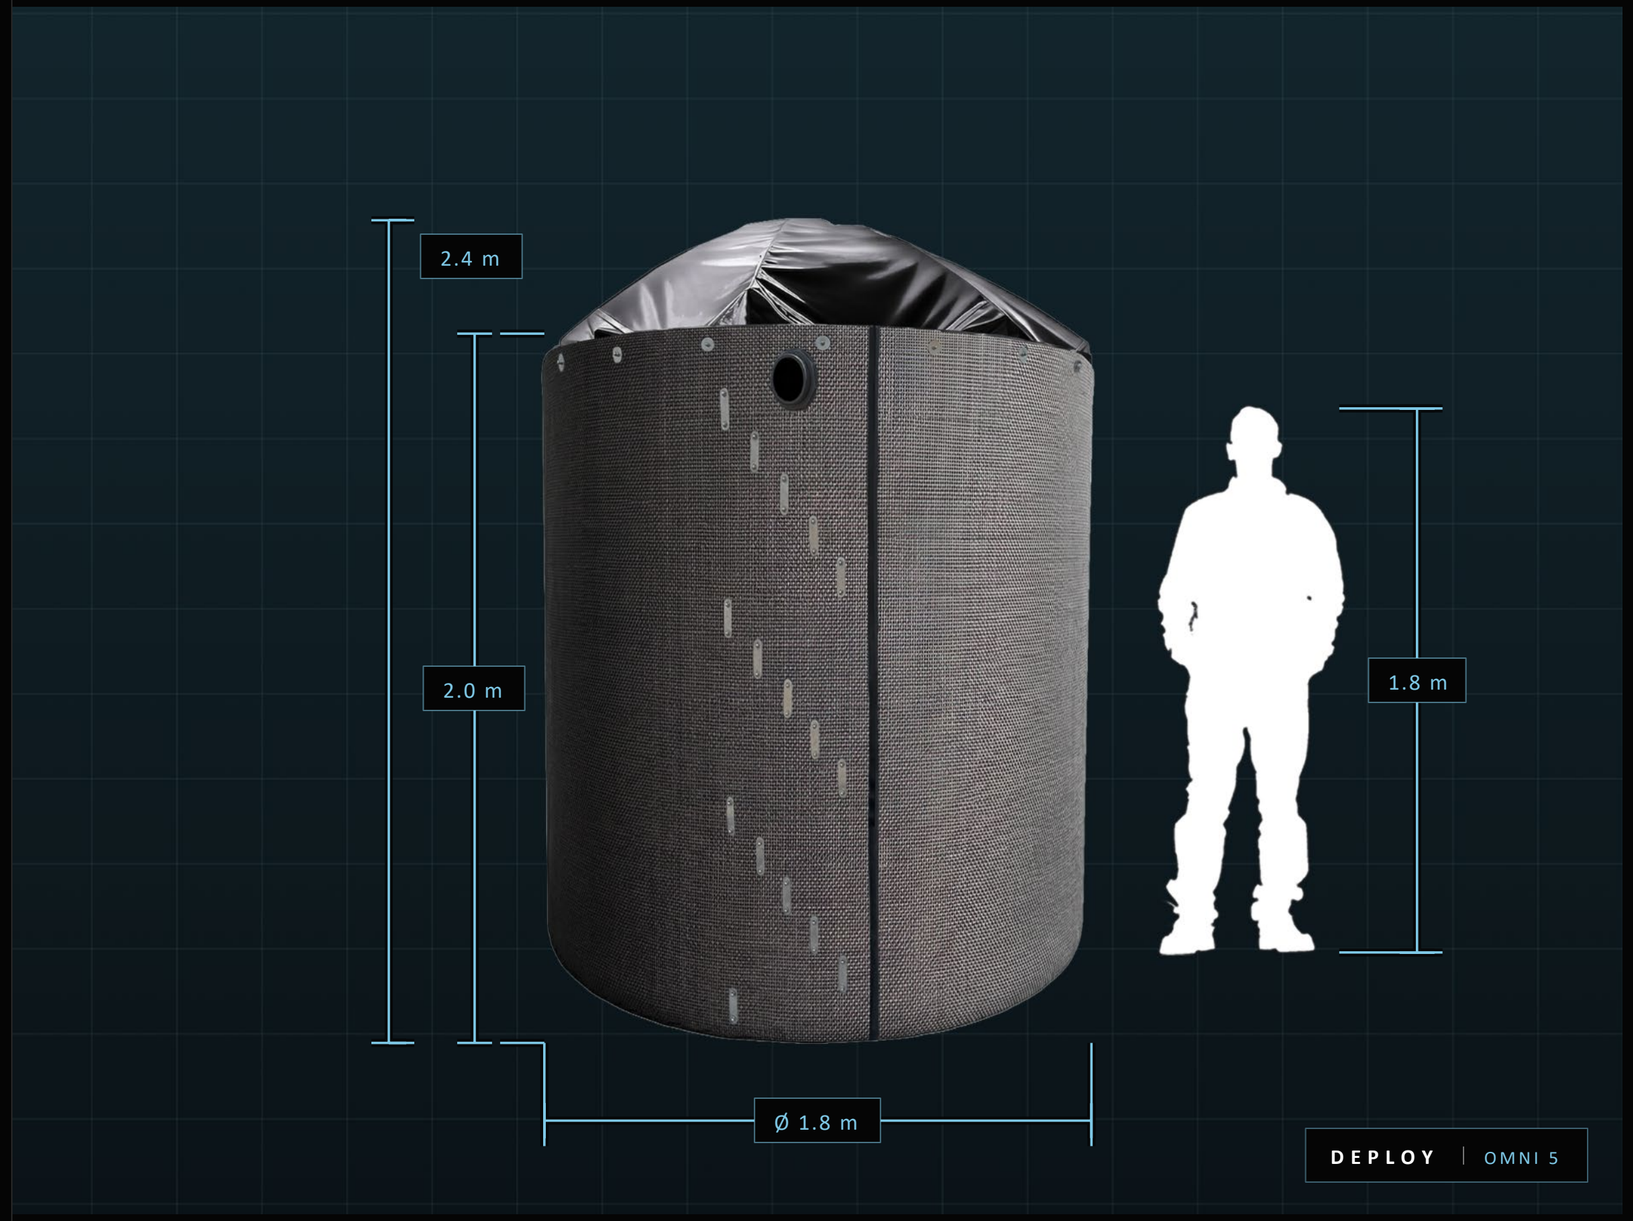

CAPACITY	5,000 litres · 1,320 gal
HEIGHT TO LID	2.4 m